

# Eco Series Battery Settings for Solis Inverters



## OVERVIEW

Settings listed are only applicable to battery charge and discharge. All other settings are the responsibility of the integrator.

It is the responsibility of the integrator to have a full understanding of the connected PCE prior to programming, and it is preferred that they have attended the manufacturer's training or integration course should they be available.

### SoC Drift

State of Charge ("Soc") drift happens when the product that is calculating SoC builds up an accumulative error. This error is generally due to tolerance of components that measure voltage and current, and algorithms used to calculate the SoC. Most products will reset its accumulative error when the system gets to 100% SoC or Float.

It is important that a well-designed battery storage system reaches Float stage as regularly as possible, preferably every one to two days to rest SoC drift.

### SoC drift can be addressed in many ways.

Examples:

1. Sufficient solar sized to charge batteries to float on the winter equinox
2. Backup source installed (grid or generator) to allow charging of batteries during extended bad weather or high load events.

## Recommended Minimum Battery Modules

	Eco4840P	Eco4847P
Solis S5-EH1P-L Hybrid Inverter	4	3
Solis S6-EH1P5K-L-AU	4	3
Solis S6-EH1P5K-L	4	3
Solis S6-EH1P8K-L-PLUS-AU	5	4

## How many batteries do I need?

Minimum battery size should be greater than the rated peak output of the inverter.

Battery to PV ratio is no less than 2.5kWh (battery) : 1kw (PV).

The battery quantity is not compulsory, however it's highly recommended as a minimum to reduce possible battery trips due to over current.

*Always consult and read the manufactures documentation before designing, installing and programming their devices.*

## Battery Settings for S5 Inverters

	Eco4840P	Eco4847P
Battery Type	Lead Acid Battery	
Battery capacity	Total Ah Capacity of PowerPlus Energy Battery Bank Installed	
Floating voltage	57.6V	55.7V
I_Max Discharge	Max. 39A per battery installed	Max. 39A per battery installed
I_Max Charge	Max 39A per battery installed	Max. 39A per battery installed
Equalizing Voltage	57.6V	55.7V
Overdischg Voltage	50.2V	
Force Charge Voltage	48V	
ForceChg PLmt	Max. 2000W per battery installed	
Temp. Compensation	0	
AMB. Temp.Lower	5°	
AMB.Temp.Upper	45°	
Power Limit On	From Grid	
<b>Save and Send</b>		
Environment Temp	Warm	

## System Settings for S6 Inverters

	Eco4840P	Eco4847P
Battery Type	51.2V Lithium Battery	
Max Charge Current	Max - 0.5C - 50% of total Ah Capacity Installed	
Max Discharge Current	Max. 63A per battery installed	
Over Discharging	49V	
Recovery	51V	
Force Charge Voltage	48V	

## Battery Settings for S6 Inverters

	Eco4840P	Eco4847P
Battery Capacity (Ah)	Total Ah Capacity of PowerPlus Energy Battery Bank Installed	
Equalizing Charge Voltage	Max - 0.5C - 50% of total Ah Capacity Installed	
Floating Charge Voltage	57.6V	55.7V
Over Discharging	57.6V	55.7V
Equalization Voltage	57.6V	55.7V
Equalization Interval	21 Days	
Equalization Hours	1h	
TEMPCO	0 mv / °C / cell	

Installers should ensure an adequate system design is carried out at all times. PPE accepts no responsibility for underperforming system designs. As part of our continued improvement process, settings are subject to change without notice and are correct at time of publishing.