


SMART METER CONNECTING DIAGRAM

1. Connect the L,N lines to the 3, 6 terminals of the smart meter respectively.
2. Connect the Current Transformer (CT) cables (white) and (Black) to terminals 1, 4 of the smart meter respectively.
3. Connect the communication connector's cables RS485A(+) and RS485B(-) to the respective terminals on the smart meter.

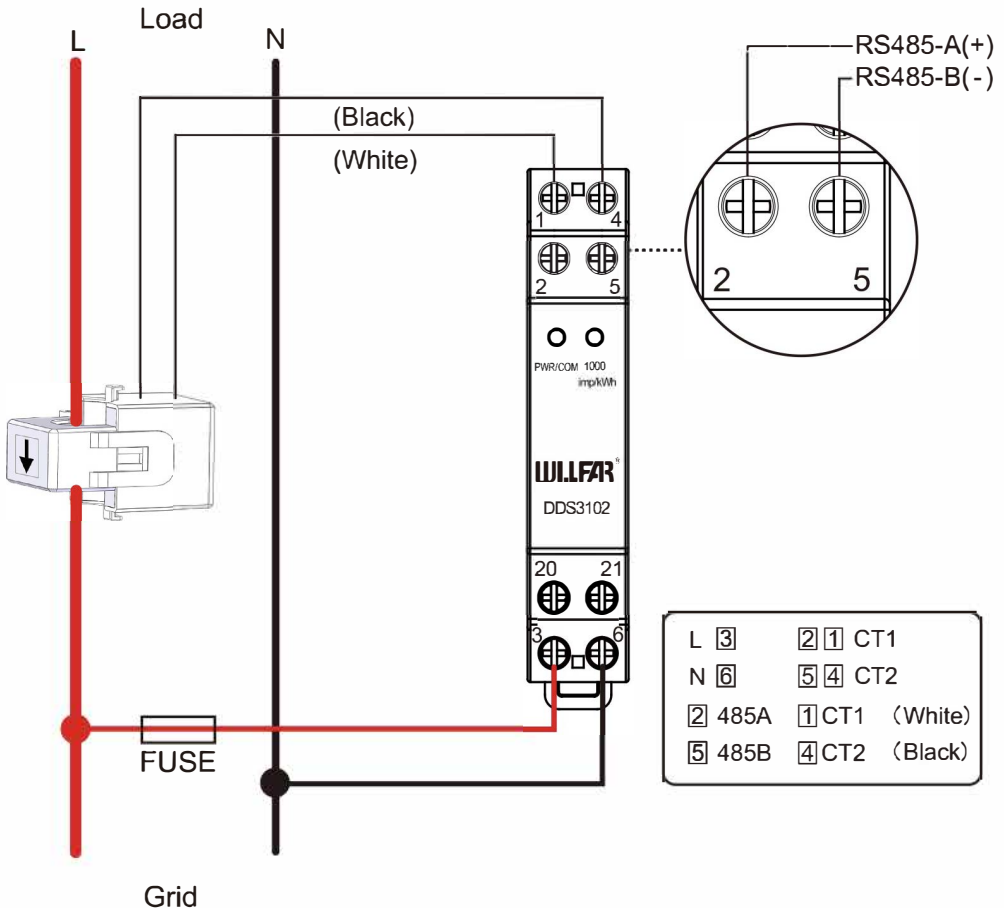

Note: The maximum torque for the terminal screws 3 and 6 is 1.7N.m, and the recommended torque is $(1.0 \pm 0.1)\text{N.m}$; The maximum torque of terminals 1,2,4 and 5 is 0.4N.m, and the recommended torque is $(0.20 \pm 0.05)\text{N.m}$.

Note: Refer to relevant Australian Standards for overcurrent protection (fuse).