


SMART METER CONNECTING DIAGRAM

1. Connect L to terminal 3 and N to terminal 6 of the Meter.
2. Connect the CT to terminal 1(white) and terminal 4(black) of the Meter.
3. Connect RS485A(terminal 2) and RS485B(terminal 5) to Whispr Smart Meter Connection RS485A(pin 4) and RS485B(pin 5).

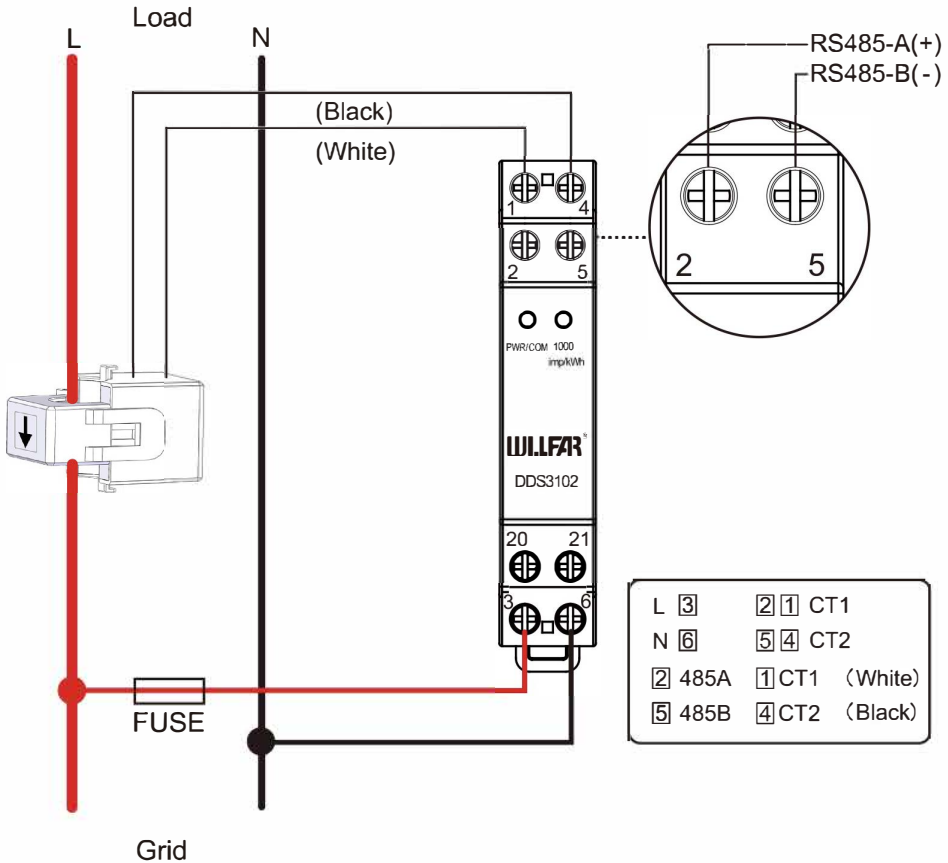

Note: The maximum torque for the terminal screws 3 and 6 is 1.7N.m, and the recommended torque is (1.0 ± 0.1) N.m; The maximum torque of terminals 1,2,4 and 5 is 0.4N.m, and the recommended torque is (0.20 ± 0.05) N.m.

Note: Refer to relevant Australian Standards for overcurrent protection (fuse).